
# E-TINT® EYEWEAR
## QUICK START GUIDE

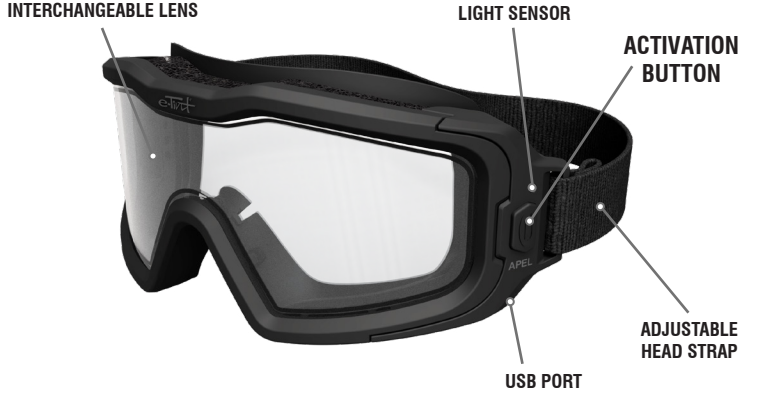


Clean with warm water, mild detergent, and a soft cloth. Use glass cleaner for stubborn residue.

DO NOT immerse eyewear in liquids. If eyewear or USB cord have been exposed to excessive sweat or moisture, allow to dry (approx. 8 hours) before charging.


DO NOT store eyewear connected to a charger for extended period of time.

DO NOT leave or store eyewear in excessive heat.


SCAN TO VIEW FULL MANUAL

COPYRIGHT © 2025 e-TINT


# E-TINT® EYEWEAR
## QUICK START GUIDE

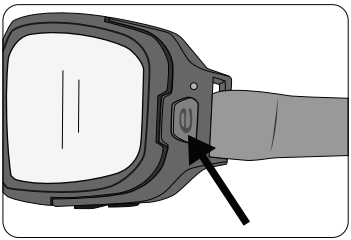

Press button to tint ON and OFF. Press & hold button three (3) seconds for hands-free (auto) mode. To adjust light sensitivity, see full manual.

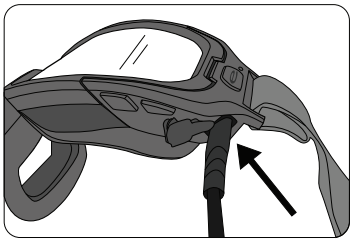

Charge goggle with supplied USB cable and a wall adapter or computer. Goggle will turn clear when fully charged.

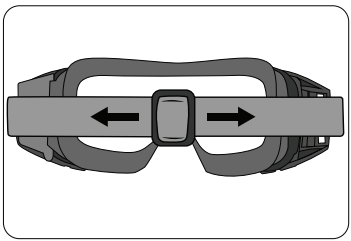

Move strap-adjusting slide left or right to tighten or loosen.

www.e-tintproducts.com

This product is protected by patents in the U.S.A. and elsewhere.
For details, visit www.e-tintproducts.com/intellectual property.